Pawsitively Clean™

BISSELL®

yikes!™

COMPACT DEEP CLEANER
For Spots, Spills & Stains

USER'S GUIDE
87K1 SERIES 220-240V

2 **Thank You**

3 **Safety instructions**

4 **Product view**

5 **Product features**

6 **Assembly**

6-7 **Operations**

8 **Maintenance and care**

9 **Troubleshooting**

10 **Replacement parts**

10 **Accessories**

11 **Warranty**

12 **Consumer services**

Thanks for buying a Pawsitively Clean™ Yikes!™ Compact Deep Cleaner

We're glad you purchased a Pawsitively Clean Yikes! Compact Deep Cleaner for Spots, Spills & Stains. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your Yikes! Compact Deep Cleaner is well made, and we back it with a limited one-year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Services department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your Yikes! Compact Deep Cleaner.

Thanks again, from all of us at BISSELL.



Mark J. Bissell
President and Chief Executive Officer

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

Read all instructions before using your Compact Deep Cleaner.

Always connect to a properly Earthed outlet. Unplug from outlet when not in use and before conducting maintenance or troubleshooting.

⚠ WARNING: To reduce the risk of fire, electric shock, or injury:

- Do not expose to rain. Store indoors
- Do not leave machine when it is plugged in
- Do not service machine when it is plugged in
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard
- Do not use machine if it has been dropped, damaged, left outdoors or dropped into water
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, run appliance over cord, or expose cord to heated surfaces
- Do not carry the appliance while in use
- Do not unplug by pulling on cord; unplug by grasping plug not the cord
- Do not handle plug or appliance with wet hands
- Do not put any object into appliance openings, use with blocked opening or restrict air flow
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts
- Do not pick up hot or burning objects
- Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc.) or use in the presence of explosive liquids or vapours
- Do not use appliance in an enclosed space filled with vapours given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapours
- Remove plug from electrical outlet before cleaning or maintaining the appliance
- Not intended for use by persons (including children) with reduced physical,sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- Young children should be supervised to ensure that they do not play with the appliance
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, petrol, etc.)
- Do not modify the Earthed plug
- Do not use for any purpose other than described in this User's Guide
- Use only manufacturer's recommended attachments
- Use only cleaning products formulated by BISSELL for use in this appliance to prevent internal component damage
- Keep openings free of dust, lint, hair, etc.
- Keep appliance on a level surface
- Turn off all controls before unplugging
- Be extra careful when cleaning stairs
- Pay close attention when working around children

SAVE THESE INSTRUCTIONS.

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

⚠ WARNING:

THIS APPLIANCE MUST BE EARTHED.

IMPORTANT FOR OPERATION ON A 220-240 VOLT A.C. 50/60 Hz POWER SUPPLY ONLY.

Product view

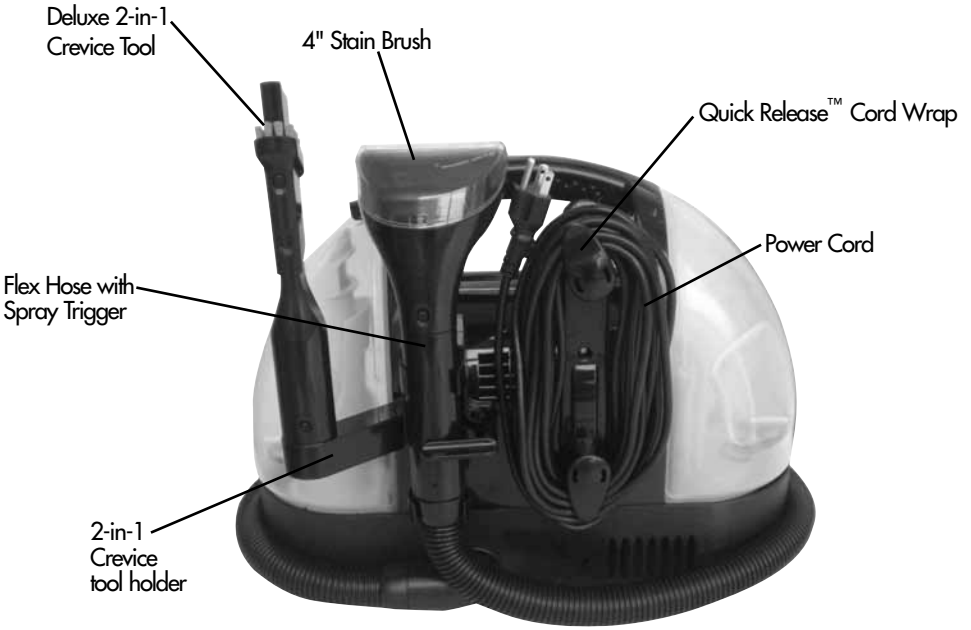

Product Features

Flex hose clip

The clip guides the storage of the vacuum flex hose around the unit.

2-in-1 crevice tool clip

Attaches to the unit for storage of the 2-in-1 crevice tool.

4" stain brush

The standard tool that attaches to the flex hose.

Large Mess tool

Six inch tool that attaches to the flex hose for larger area cleaning.

Quick Release cord wrap

To remove the power cord, gently twist/rotate the Quick Release cord wrap clockwise

Power cord

The power cord stores on the back of the Yikes! by wrapping around the Quick-Release cord wrap.

NOTE: Unwrap the power cord completely before operating the unit.

⚠ WARNING:

Do not use an extension cord with this product. The use of an extension cord may result in a severe electrical shock, particularly if the extension cord does not have an electrical rating higher than that of the product, OR if the extension cord does not have a three-prong grounding plug and if the extension cord is not plugged into a circuit box with a ground fault circuit interrupter. Safety precautions such as keeping all connections off the ground and dry will not eliminate the danger.

⚠ WARNING:

Do not use this product while on any type of ladder. Do not place the product in a place where it will be stepped on or kicked while in use. Do not place the product on an elevated surface where it may be pulled off the surface while in use.

⚠ WARNING:

Use only BISSELL or Pawsitively Clean Compact Machine formula in your cleaner. Use of cleaning formulas which contain lemon or pine oil may damage this appliance and void the warranty. Chemical spot cleaners or solvent-based soil removers also should not be used. These products may react with the plastic materials used in your cleaner, causing cracking or pitting.

Assembly

Assembling your Yikes! is a simple process. The only thing you will need to assemble your cleaner is a Phillips head screwdriver.

1. Slide the back plate of the flex hose clip into the opening on the front of the unit. You will hear a "snap" when it is locked in place.
2. Take the flex hose storage bracket and slide the lower plate into the opening on the back of unit. Make sure the screw holes line up.
3. Insert screw and tighten with a screwdriver.
4. Wrap the flex hose around unit and place hose grip into bracket. Turn bracket latch clockwise to lock in place.
5. Slide tool clip into slit on flex hose (located on storage bracket) place tool on clip.

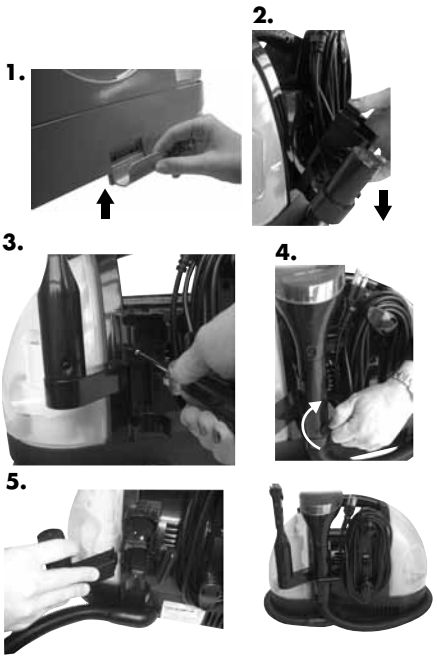

Operations

Getting ready

1. To fill the clean water tank.
   - **A.** Remove the tank by lifting it straight up and then away from the unit.
   - **B.** Unscrew the black cap at the bottom of the clean/solution tank.
   - **C.** Add 4 fl oz of BISSELL or Pawsitively Clean Compact Machine formula to the FORMULA fill line on the clean/solution tank. Fill the clean/solution tank with hot (NOT boiling) tap water to the WATER fill line. Replace and tighten the bLack cap. DO NOT BOIL OR MICROWAVE WATER
   - **D.** Replace the clean/solution water tank by lining up the vertical guides on the left side of the unit with the indentations on the clean water/solution tank and gently sliding it down into position.
2. Unwrap vacuum flex hose completely from onboard hose storage.
3. Attach your selected cleaning tool to the spray trigger unit by pressing tool onto spray trigger firmly until the button lock snaps into hole. Make certain the tool is securely attached.

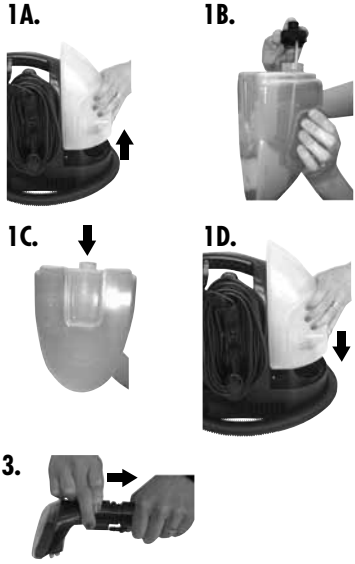

Operations

Getting ready (continued)

4. Twist the quick release cord wrap clockwise to unwrap the power cord completely from onboard cord storage and plug into outlet as described in Important safety Instructions, page 3.

5. Press power switch to ON position.

6. Press and hold spray trigger—spray will start in a few seconds. Raise the tool slightly to check for spray.

4.

6.

Tip:

Before you clean, test a small hidden area of for color-fastness.If color is affected, do not use.

Pre-treating

Cleaning effectiveness will be enhanced if you pre-treat heavily stained or highly-soiled areas. Here's how to do it:

1. Hold the cleaning tool just above the surface of the carpet or upholstery to be cleaned. Press the trigger to release a spray of cleaning solution directly onto the soiled area.

2. Wait 3-5 minutes before cleaning.

Cleaning with your Yikes! Compact Deep Cleaner

1. Hold the tool approximately 1" above the soiled surface. Press the spray trigger to apply the cleaning solution to the soiled area.

2. Using the brush on the tool, gently scrub the area to be cleaned.

3. For thorough cleaning, spray additional solution while the brush and suction are in contact with the surface.

4. Apply downward pressure on the tool and pull it toward you. The suction will remove the dirt and cleaning solution. Continue until no more dirt can be removed.

5. As a final step, use "drying strokes" (by not pressing the spray trigger) to remove as much liquid/moisture as possible. Repeat this step as often as necessary.

NOTICE:

Check the manufacturer's tag before cleaning upholstery. "W" or "WS" on the tag means you can use your Yikes! compact deep cleaner. If tag is coded with an "S" (with diagonal strike-through), or says "Dry Clean Only," do not proceed. If manufacturer's tag is missing or not coded, check with your furniture dealer.

Tip:

Check upholstery stuffing before cleaning. Colored stuffing may bleed through the fabric when it becomes wet.

Tip:

Deep cleaning stairs and high-traffic areas on a regular basis can prolong carpet life.

Maintenance and care

After cleaning

1. Turn power switch to OFF position.
2. Unplug power cord from outlet.

   Note: If a significant amount of formula and clean water remains, it is all right to leave it in the clean water tank for your next cleaning task.
3. Empty and rinse the dirty water tank after each use, OR when dirty water reaches the indicated maximum fill line. To remove the tank, lift up the dirty water tank retainer lever and remove the tank from the unit.
4. Disconnect the cleaning tool from the spray trigger by pushing down on button lock and pulling straight off **(DO NOT twist tools to remove them)**
5. Once removed from the spray trigger, all tools can be cleaned by rinsing under clean running water.
6. Check spray nozzle for accumulated dirt or debris. If necessary, clean with soft bristle brush.

3.

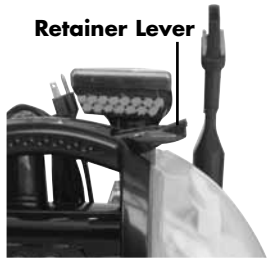

Tip:

Hair, string and small objects can block the vacuum hose or tools. Check them regularly for obstructions.

Machine storage

1. Wipe all surfaces with a soft cloth.
2. Wrap power cord around the cord wrap on the back of the Yikes!
3. Wrap flex hose around the base of the unit and secure the spray trigger.
4. Store unit in protected, dry area, at room temperature (4.4° to 43.3°C).

⚠ WARNING:
Keep spray away from face. Failure to do so may result in personal injury.

Troubleshooting

Reduced spray or no spray

Possible causes	Remedies
1. Tank release latch is not closed properly	1. Lift up the tank release latch and press down firmly to make sure it is in place
2. Spray nozzle clogged	2. Clean spray nozzle
3. Clean water/solution tank empty	3. Check/refill tank
4. Clean water/solution insert clogged	4. Clean insert at bottom of clean water/solution tank
5. Pump needs priming	5. Gently lift clean water/solution tank while depressing the spray trigger OR gently squeeze clean tank while depressing spray trigger

Deep cleaner won't pick up cleaning solution

1. Poor upholstery/carpet tool position	1. Reposition tool on surface, follow recommended cleaning procedures
2. Dirty water/solution if full	2. Empty dirty water tank
3. Tool brush worn	3. Replace with new brush
4. Excess solution in vacuum flex hose	4. Lift tool and point upwards to allow water in hose to flow into the dirty water tank
5. Incorrect cleaning formula	5. Use BISSELL or Pawsitively Clean Compact Machine Formula only

Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a Pawsitively Clean product from BISSELL.

Please do not return this product to the store

Replacement parts

Item	Part No.	Part Name
1	203-7158	Clean Water Tank (includes cap and insert assembly)
2	203-7144	Dirty Water Tank (includes the airstack and float assembly)
3	203-5011	Quick Release Cord Wrap
4	203-5012	2-in-1 Crevice Tool Holder
5	203-5013	Flex Hose Clip
6	203-5014	Cap & Insert Assembly

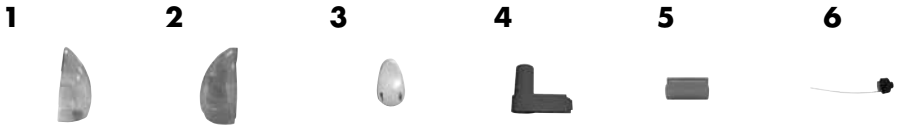

Accessories parts

Item	Part No.	Part Name
1	203-6653	4″ Stain Brush
2	203-6654	Large Mess Tool
3	203-0116	2-in-1 Crevice Tool
4	314-9162	3" Tough Stain Tool
5	203-6652	TurboBrush™ Tool
6	38V8- F	Pawsitively Clean™ Compact Machine Formula 946 ml

Compact Deep Cleaner

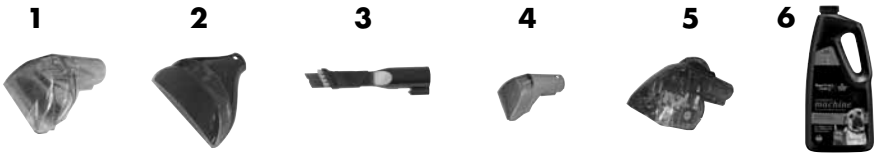

Warranty

This warranty gives you specific legal rights, and you may also have other rights which may vary from country to country. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Services by E-mail, telephone, regular mail as described below, or contact your local in country distributor.

Limited One Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, BISSELL Homecare, Inc. will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for one year any defective or malfunctioning part due to manufacturer defect.

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

BISSELL recommends that the original packaging be kept for the duration of the warranty period in case such need arises within the warranty period that the item need re-packing and transportation.

For Australian inquiries:
Monday - Friday 9 am — 5 pm

BISSELL AUSTRALIA PTY LIMITED
42 Rocco Dr.
Scoresby 3179
Victoria
Australia
Telephone: 1.800.811.183

For New Zealand inquiries:
Monday - Friday 9 am — 5 pm

Parex Industries Ltd.
5 Tolich Place
Henderson 0610
Auckland
New Zealand
Telephone: 0800.247.735

For all other inquiries:
Monday - Friday 8 am — 4 pm

BISSELL Homecare, Inc.
PO Box 1888
Grand Rapids, Michigan 49501 USA
Telephone: 01.616.453.4451
Fax: 01.616.453.1383

***EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY**

BISSELL HOMECARE, INC. AND ITS IN-COUNTRY DISTRIBUTORS ARE NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

FOR AUSTRALIAN CONSUMERS ONLY: OUR GOODS COME WITH GUARANTEES THAT CANNOT BE EXCLUDED UNDER THE AUSTRALIAN CONSUMER LAW. YOU ARE ENTITLED TO A REPLACEMENT OR REFUND FOR A MAJOR FAILURE AND FOR COMPENSATION FOR ANY OTHER REASONABLY FORESEEABLE LOSS OR DAMAGE. YOU ARE ALSO ENTITLED TO HAVE THE GOODS REPAIRED OR REPLACED IF THE GOODS FAIL TO BE OF ACCEPTABLE QUALITY AND THE FAILURE DOES NOT AMOUNT TO A MAJOR FAILURE.

THIS WARRANTY IS IN ADDITION TO OTHER RIGHTS OR REMEDIES UNDER LAW. NOTHING IN THIS WARRANTY EXCLUDES, LIMITS OR MODIFIES ANY LIABILITY OF BISSELL WHICH IS IMPOSED BY LAW, OR LIMITS OR MODIFIES ANY REMEDY AVAILABLE TO THE CONSUMER WHICH IS GRANTED BY LAW. TO MAKE A CLAIM UNDER THIS WARRANTY CONTACT BISSELL AUSTRALIA PTY LTD (DETAILS ABOVE). CONTACT BISSELL PRIOR TO RETURNING ANY GOODS. WHERE AGREED, BISSELL WILL REIMBUSE REASONABLE POSTAGE / HANDLING COSTS (IF ANY) FOR RETURNING GOODS TO BISSELL.

Consumer services

If your BISSELL product should require service:

Call BISSELL Consumer Services at the numbers below and we will give you the location of a BISSELL Authorized Service Center in your area. If you have questions about your warranty or need replacement parts please contact the numbers below.

For Australian inquiries:
Monday - Friday 9 am — 5 pm

BISSELL AUSTRALIA PTY LIMITED
42 Rocco Dr.
Scoresby 3179
Victoria
Australia
Telephone: 1.800.811.183

For New Zealand inquiries:
Monday - Friday 9 am — 5 pm

Parex Industries Ltd.
5 Tolich Place
Henderson 0610
Auckland
New Zealand
Telephone: 0800.247.735

For all other inquiries:
Monday - Friday 8 am — 4 pm

BISSELL Homecare, Inc.
PO Box 1888
Grand Rapids, Michigan 49501 USA
Telephone: 01.616.453.4451
Fax: 01.616.453.1383

Or visit the BISSELL website - **www.bissell.com**

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____

Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 11 for details.

BISSELL®

Experts In Home Cleaning™

©2011 BISSELL Homecare, Inc
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 120-4407
Rev 11/11
Visit our website at:
www.bissell.com